


INSTALLATION INSTRUCTIONS

900210-10: PIM SHIELD THREADED ROD KIT, 3/8" x 2" LG (SOLD IN PACKAGES OF 10)



STEP 1

ATTACH THREADED ROD TO 900209-10: PIM SHIELD CABLE SUPPORT BASE (SOLD SEPARATELY)
(REFER TO INSTRUCTIONS INCLUDED WITH 900209-10 FOR THIS STEP)

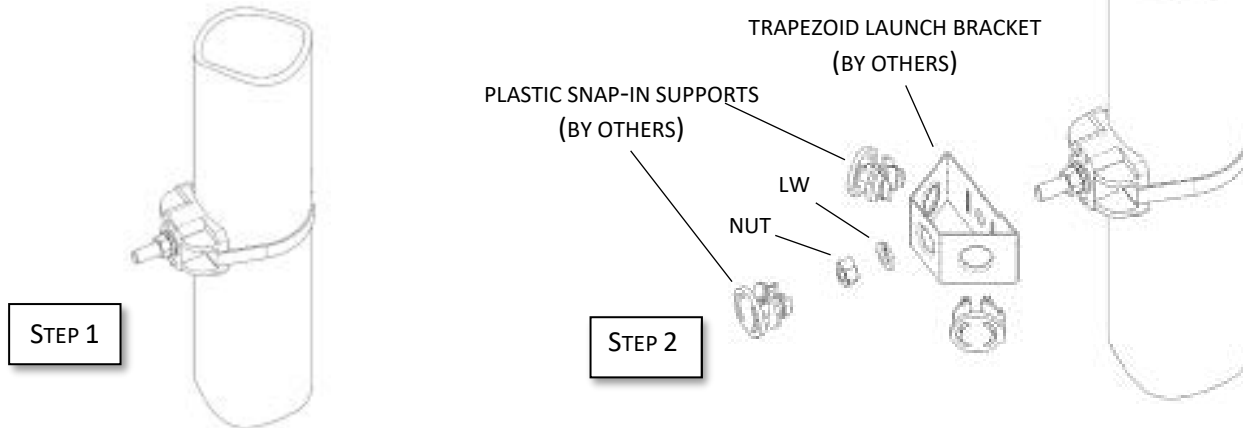

STEP 2

INSTALL TRAPEZOID LAUNCH BRACKET WITH HARDWARE AS SHOWN (TORQUE HARDWARE TO 10 FT-LB) (NOTE: SPARE WASHERS SUPPLIED WITH KIT), THEN ATTACH PLASTIC SNAP-IN SUPPORT(S) (AS REQUIRED, BY OTHERS).