



INSTALLATION INSTRUCTIONS

900211-10: PIM SHIELD THREADED ROD KIT, 3/8" x 6" LG (SOLD IN PACKAGES OF 10)



STEP 1

ATTACH THREADED ROD TO 900209-10: PIM SHIELD CABLE SUPPORT BASE (SOLD SEPARATELY)
(REFER TO INSTRUCTIONS INCLUDED WITH 900209-10 FOR THIS STEP)

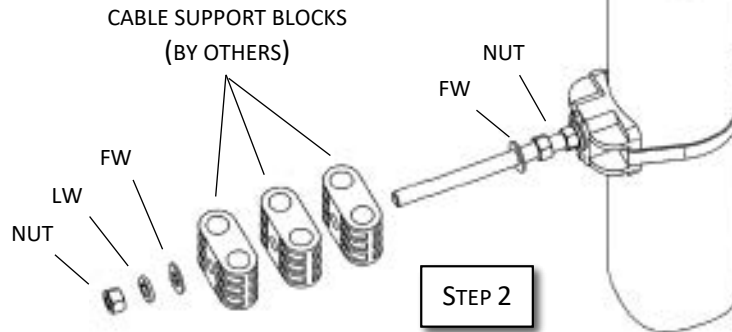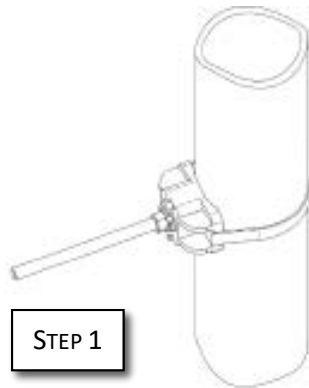

STEP 2

INSTALL NUT AND WASHER, THEN ATTACH CABLE SUPPORT BLOCK(S) (AS REQUIRED, BY OTHERS) WITH HARDWARE AS SHOWN
(TORQUE HARDWARE TO 10 FT-LB) (NOTE: SPARE WASHERS SUPPLIED WITH KIT)